

Q : How do I restore my MC35 to its factory default state?

WARNING

**USING THIS SOLUTION COULD RESULT IN LOSS OF ALL DATA
PLEASE PROCEED WITH CAUTION**

Setup Requirements:

- An SD or MMC Card (with at least 64MB capacity)
- A PC with access to a Card Reader
- A small Philips head screw driver
- A MC35 Mobile Computer running Windows Mobile 5.

[\[How to find Model Number\]](#) [\[Determine OS Version\]](#)

Download Instructions:

You should have already downloaded the files required to factory restore your MC35. If not, please use the link provided below to do so.

http://60.242.34.175/mc35/Restore_WM5.zip

Installation Instructions:

- Extract all files contained within the Restore.zip file to the root directory of the SD or MMC Card.
- Insert the SD or MMC Card into the top of the unit, making sure it clicks in properly. Remove the stylus from the rear of the device.
- Press and hold the top button and the bottom button found on the right side of the device, then press Reset (on the left) using the tip of the stylus. Hold the top and bottom buttons until MC35 Eboot appears at the top of the screen.

If you require further information or have any questions please contact:

techsupport@leopardsystems.com.au or call 03 9534 2022 (Mon - Friday 9am - 5pm).