

## Q : How do I restore my MC70 to its factory default state?

---

### WARNING

**USING THIS SOLUTION COULD RESULT IN LOSS OF ALL DATA  
PLEASE PROCEED WITH CAUTION**

#### Setup Requirements:

- An SD or MMC Card (with at least 64MB capacity)
- A PC with access to a Card Reader
- A small Philips head screw driver
- A MC70XX Mobile Computer running Windows Mobile 5.

[\[How to find Model Number\]](#) [\[Determine OS Version\]](#)

#### Download Instructions:

You should have already downloaded the files required to factory restore your MC70. If not, please use the link provided below to do so.

<http://60.242.34.175/mc70/Restore.zip>

#### Installation Instructions:

- Extract all files contained within the Restore.zip file to the root directory of the SD or MMC Card.
- Remove the SD Card Slot door of the MC70 (on right-hand side).
- Insert the SD or MMC Card, making sure it clicks in properly
- Hold down the 1 and 9 keys on the keypad.
- Press the power button and then release all three buttons.
- The system will reboot and you will see the MC70 Splash screen, followed by an Upgrade screen.
- Allow the upgrade to complete. The system will reboot automatically.
- Allow time for the system to boot up again.

If you require further information or have any questions please contact:

[techsupport@leopardsystems.com.au](mailto:techsupport@leopardsystems.com.au) or call 03 9534 2022 (Mon - Friday 9am - 5pm).