

Q : How do I configure my LS2208/34x8/35x8/42x8/9208 for PS/2 (KBW) connectivity?

WARNING

USING THIS SOLUTION COULD RESULT IN LOSS OF ALL DATA
PLEASE PROCEED WITH CAUTION

Setup Requirements:

- An LS2208/34x8/35x8/42x8/9208 barcode scanner with a PS/2 Synapse Cable.

[\[How to find Model Number\]](#)

Download Instructions:

No additional files are required to perform this operation.

Installation Instructions:

- Scan the following barcode to configure.



IBM PC/AT and IBM PC COMPATIBLE

To Test:

- Plug in the KBW cable, wait for scanner to power on (unless it is cordless). For corded scanners, scan the barcode above. For cordless scanners, scan the cradle Pair barcode then the barcode above.
- Open Notepad on your PC and scan a barcode.
- If you hear a four beep error message, scan the following barcode, then proceed to repeat steps 1 and 2.



SET DEFAULTS

If you require further information or have any questions please contact:

techsupport@leopardsystems.com.au or call 03 9534 2022 (Mon - Friday 9am - 5pm).